

PT-1049/PT-1051

WIRELESS PROGRAMMABLE ROOM THERMOSTAT

USERS MANUAL

WiFi ηλεκτρονικός θερμοστάτης χώρου, υψηλής ακρίβειας, με ψηφιακές ενδείξεις. Εξοπλίζεται με ευανάγνωστη, φωτιζόμενη οθόνη, με ενδείξεις επιθυμητής και πραγματικής θερμοκρασίας.



1. Τεχνικά Χαρακτηριστικά:

Τάση:	230VAC,50/60HZ	Τάση:	Max 16A
Κατανάλωση ισχύς:	<1W	Εύρος ελέγχου:	5°C~45°C
Προεπιλεγμένη απόκλιση θερμοκρασίας:	1'C $(1^{5}$ 'C adjustable)	Όριο ρύθμισης:	20~60 °C
Ακρίβεια:	±1°C	Θερμοκρασία περιβάλλοντος	-5-50°C
Αισθητήρας:	NTC	Βαθμός ΙΡ:	IP20

2. Περιγραφή θερμοστάτη



3. Λειτουργίες:

- 🕿: Χειροκίνητη λειτουργία: ελέγξτε την συσκευή χειροκίνητα.
- () : Προγραμματισμένη λειτουργία: μπορεί να ελεγχθεί αυτόματα, ορίζοντας την ώρα και την θερμοκρασία (με 6 διαφορετικές ώρες και σχετικές θερμοκρασίες.

Κλείδωμα: Πιέστε τα πλήκτρα " Α " & " V" ταυτόχρονα για περισσότερα από 5 δευτερόλεπτα για να κλειδώσετε την συσκευή. Πιέστε για 5 δευτερόλεπτα ξανά για να την ξεκλειδώσετε.

- 👌 : Θέρμανση : Η λειτουργία θέρμανσης είναι ενεργοποιημένη.
- Ξ: Χαμηλή θερμοκρασία (δείτε λεπτομέρειες στην ρύθμιση 5 του πίνακα "Ρύθμιση παραμέτρων"). Ενεργοποίηση λειτουργίας χαμηλής θερμοκρασίας.

4. Λειτουργία πλήκτρων

- \bigcirc : Πιέστε για ενεργοποίηση/απενεργοποίηση.
- Μ : Πιέστε για αλλαγή λειτουργίας, χειροκίνητη λειτουργία ή προγραμματισμένη λειτουργία.
- 🛕 : Άνω, για την αύξηση της τιμής της ρυθμιζόμενης παραμέτρου ή την ρύθμιση της λειτουργίας.

😽 : Κάτω, για την μείωση της τιμής της ρυθμιζόμενης παραμέτρου ή την ρύθμιση της λειτουργίας.

Εβδομαδιαίος προγραμματισμός: Σε ενεργοποιημένη συσκευή πιέστε παρατεταμένα τα πλήκτρα "M" και "♥" για να μεταβείτε σε λειτουργία ρύθμισης εβδομαδιαίου προγραμματισμού. Πιέστε το πλήκτρο "♠" ή "♥" για να τροποποιήσετε τις τιμές και έπειτα πιέστε το πλήκτρο M για να μεταβείτε στην επόμενη ρύθμιση. Η ακολουθία των ρυθμίσεων είναι: Ώρα (Περίοδος 1)→Θερμοκρασία (Περίοδος 1) Δευτέρα με Παρασκευή →...→ Ώρα (Περίοδος 6) → Θερμοκρασία (Περίοδος 6)Κυριακή (Ο χρόνος ρύθμισης κάθε προηγούμενης περιόδου δεν μπορεί να υπερβαίνει τον χρόνο της επόμενης περιόδου)

D aa(aSaa	Frank Sta	Εβδομάδα (Δευτέ	ρα ~ Παρασκευή)	Σαββατοκύρια	χκο (Σάββατο)	Σαββατοκύρ	ιακο (Κυριακή)
Περισσος	ELKOVLOLO	Ώρα	Θερμοκρασία	Ώρα	Θερμοκρασία	Ώρα	Θερμοκρασία
1	(J	06:30	21 °C	06:30	21 °C	06:30	21 °C
2	23,	08:00	18 °C	08:00	18 °C	08:00	18 °C
3	3 <n< th=""><th>11:30</th><th>21°C</th><th>11:30</th><th>21°C</th><th>11:30</th><th>21°C</th></n<>	11:30	21 °C	11:30	21 °C	11:30	21 °C
4	4 [°] / ₃ ,	12:30	18 °C	12:30	18 °C	12:30	18 °C
5	5 < 2	18:00	21 °C	18:00	21 °C	18:00	21 °C
6	(<u>1</u> 6	22:30	16 °C	22:30	16 °C	22:30	16 °C

5. Ρύθμιση παραμέτρων

Σε απενεργοποιημένη συσκευή πιέστε παρατεταμένα τα πλήκτρα "Μ" και "♥" για να μεταβείτε σε λειτουργία προχωρημένων ρυθμίσεων. Στην οθόνη θα εμφανιστούν όλοι σχετικοί κωδικοί και τιμές. Πιέστε το πλήκτρο "▲" ή "♥" για να τροποποιήσετε τις τιμές και έπειτα πιέστε το πλήκτρο Μ για να μεταβείτε στην επόμενη ρύθμιση. Οι ρυθμίσεις θα παραμείνουν και μετά την απενεργοποίηση της συσκευής

Κωδικός	Περιγραφή	Προκαθορισμένη τιμή	Λεπτομέρειες
1Adj	Βαθμονόμηση θερμοκρασίας	-2	-9°C~+9°C
2Sen	Τύπος αισθητήρα	In	 Ι n: Εσωτερικός αισθητήρας (για έλεγχο και προστασία της θερμοκρασίας) ΟU: Εξωτερικός αισθητήρας (για έλεγχο και προστασία της θερμοκρασίας) AL: Εσωτερικός/εξωτερικός αισθητήρας (εσωτερικός αισθητήρας για έλεγχο θερμοκρασίας δωματίου, εξωτερικός αισθητήρας για προστασία της θερμοκρασίας)
3Lit	Προστασία υψηλής θερμοκρασίας	50.0	5~60 ² C
4dif	Βήμα εναλλαγής τιμής	1	1~5 <i>°</i> C
5Ltp	Προστασία χαμηλής θερμοκρασίας	Off	On: Ενεργοποιημένη λειτουργία Off: Απενεργοποιημένη λειτουργία
6Hit	Όριο υψηλότερης θερμοκρασίας	45	35~95 <i>°</i> C
70EN	Λειτουργία ανίχνευσης ανοιχτού παραθύρου (OWD)	OFF	On: Ενεργοποιημένη λειτουργία Off: Απενεργοποιημένη λειτουργία
8Otl	Χρόνος ανίχνευσης OWD	15	Εύρος: 2~30 λεπτά
9Otp	Πτώση θερμοκρασίας OWD (εντός χρόνου ανίχνευσης)	2	Εύρος: 2~4 ℃
OPdt	Χρόνος καθυστέρησης OWD (επιστροφή στην προηγούμενη κατάσταση)	30	Εύρος: 10~60 λεπτά
AFAC	Επαναφορά ρυθμίσεων	-	Όταν φαίνεται στην οθόνη η ένδειξη "-" πιέστε παρατεταμένα το πλήκτρο "Μ" για 5 δευτερόλεπτα έως να εμφανιστεί η ένδειξη "" υποδεικνύοντας η επαναφορά ρυθμίσεων έχει πραγματοποιηθεί επιτυχώς

6. Εγκατάσταση

- 1. Αφαιρέστε το μπροστινό κάλυμμα εισάγωντας ενα κατσαβίδι στην κάτω σχισμή.
- 2. Συνδέστε τα καλώδια όπως υποδεικνύεται στο διάγραμμα και έπειτα βιδώστε καλά.
- 3. Τοποθέτηστε την πλάκα στήριξης στην πρίζα με κατσαβίδι.

4. Συνδέστε την πίσω τροφοδοσία και την μπροστινή πλάκα τοποθετώντας τον αγώγιμο πείρο στην υποδοχή, μετά ταιριάξτε την υποδοχή και πιέστε ελαφρά ώστε να εφάπτεται καλά.

7. Διάγραμμα



Electric Heating Thermostat



Gas Boiler Thermostat

8. Σύνδεση WiFi





<	Add Manually	Auto S	can 🕀
Electrician		1115	.T.o.
Lighting	Wash Aid	Cloud Frame	TRV
		Surroundings	
Large Home Ap			M
Small Home Ap	Fan	Window Cleaner	Vacuum Cleaner (Bluetooth)
Kitchen Applianc	0	-	۲
Security & Sensors	Robot Vacuum	Fan (Bluetooth)	Robot Vacuus (Bluetooth)
Exercise & Health	Diffuser	Humidifier	I Air Purifier
Video Sur- veillance	Ē		-
Gateway Control	Mosquito Lamp	Air Box	HVAC
Others		21:30	0
	Dehumidifier	Weather clock	Thermostat
		6	6.

3. Στην λίστα "Small Home Application", επιλέξτε Thermostat

1. Σκανάρεται το QR code με το κινητό σας ή αναζητήστε την εφαρμογή "Smart Life" ή "TuyaSmart" στο Google Play ή το App Store. 2.Όταν ολοκληρώσετε την εγγραφή, πατήστε το εικονίδιο "+" στην επάνω δεξιά γωνία της εφαρμογής, για να προσθέσετε την συσκευή.



4. Πιέστε παρατεταμένα τα πλήκτρα "Μ" και " γ, μέχρι να αρχίζει να αναβοσβήνει στην οθόνη το εικονίδιο " και έπειτα πατήστε στην εφαρμογή "Confirm indicator rapidly blink". Definition of the set of the set

5. Εισάγετε τον κωδικό WiFi και πατήστε "Confirm" και έπειτα "Continue" για σύζευξη των συσκευών.



6. Περιμένετε μερικά δευτερόλεπτα έως ότου η συσκευή προστεθεί επιτυχώς και έπειτα πατήστε «Completed".





3. Επιλέξτε "Program" για να μεταβείτε στις ρυθμίσεις.

4. Επιλέξτε "Week Program" για να τροποποιήσετε τις ρυθμίσεις του προγράμματος.

5. Ορίστε την επιθυμητή ώρα και θερμοκρασία.

0 97 10:51



Πατήστε το εικονίδιο "settings" για περισσότερες ρυθμίσεις.

680 Hall Hall @

0 810 14:54

(E2) a (E2)	a 🕾	ିତ । 10:51 ।
<	Setting	
Child lock		0
Temperatur	e correction	-1 >
Set tempera	ature ceiling	45.0°C >
Sensor sele	ection	IN >
Frost prote	otion	
Window ch	eck	0
State of the	window	Closed
Factory dat	a reset	
dp_switch_	dif	1.0 >
dp_limition_	floortemp	50.0 >





11. Ο χρήστης μπορεί να τροποποιήσει τις ρυθμίσεις που επιθυμεί.

12. Πατήστε το εικονίδιο στην επάνω δεξιά γωνία της οθόνης για να εμφανίσετε τις πληροφορίες της συσκευής.

που θέλετε να τροποποιήσετε.

13. Επιλέξτε την παράμετρο 14. Πατήστε το πλήκτρο On/Off για να απενεργοποιήσετε τον θερμοστάτη.



ΕΙΣΑΓΩΓΗ, ΔΙΑΝΟΜΗ & ΚΑΤΑΣΚΕΥΗ DATA & MEDIA E.E. www.data-media.gr, info@data-media.gr 1ο χλμ Λαγκαδά προς Ηράκλειο, Λαγκαδάς, Θεσσαλονίκη, 57200, Τ.Θ 168 Models: AC8500H-B-WIFI [GCBL], AC8500H-B-WIFI [GBBL]



PT-1049/PT-1051

WIRELESS PROGRAMMABLE ROOM THERMOSTAT

USERS MANUAL

WiFi High precision room thermostat with digital indications. It is equipped with a legible, illuminated screen with indications of desired and real temperature.



1. Parameters

Voltage:	230VAC,50/60HZ	Current:	Max 16A
Power consumption:	<1W	Control range:	5°C~45°C
Default temp. deviation:	$1^{\circ}C(1^{-5}^{\circ}C \text{ adjustable})$	Limitation setting:	20~60 °C
Accuracy:	±1°C	Environmental temp.:	- 5-50 °C
Sensor:	NTC	IP Grade:	IP20

2. Panel display:



3. Function:

A: Manual mode: Control the device by manual.

- ():Program mode: It can be controlled automatically by the set time& temperatures (with six different time & related temperature), see below:
- Simultaneous display: For temporary control mode, press" \bigwedge "or" \bigvee " will change to this mode, the device will comes out of the temporarily current period time control, and come into the control of the manual mode, which also will automatically return to the programming mode when the next period time comes.

 $\mathbf{\hat{D}}$: Lock, Press the key " $\mathbf{\hat{A}}$ "&" $\mathbf{\hat{\nabla}}$ "together for more than 5 seconds, the device locked, and press them for another 5 seconds, it will unlock again.

👌 : Heating: Means for heating now.

🟝: Antifreezing (See the details of advance setting 5), start the antifreezing function

4. Button Functions

 \bigcirc : Power, ON/OFF by short press.

- M: Mode, Short press for manual model& programmable mode change.
- λ : Up, for increase the related parameters or adjust working mode.
- \forall : Down, do decrease the related parameters or adjust the working mode.

Weekly Program: Under Power on mode, press" M" and " \checkmark " for 5 seconds enter weekly programmable setting mode, press" A" or" \checkmark " for data change, then press " M " to enter next setting with the related sequence as below:

Weekday (Monday ~ Friday) Weekend (Saturday) Weekend (Sunday) Periods lcon Time Temperature Time Temperature Time Temperature É1 06:30 **21°**C 06:30 **21°**C 06:30 **21°**C 1 **18**°C 2 123 08:00 18°C 08:00 08:00 18°C 3 11:30 **21°**C 11:30 21°C 11:30 **21°**C 3.4 4 4 % > 12:30 18°C 12:30 18°C 12:30 18°C 5 **21°**C **21°**C **21°**C 5.0 18:00 18:00 18:00 6 22:30 **16°**C 22:30 **16**℃ 22:30 **16°**C 6

(see below attachment, each previous Period setting time can't exceed the next Period time)

Time(Period 1) → Temperature(Period 1) Monday to Friday →...→ Time(Period 6) → Temperature(Period 6) Sunday

5. Advanced setting:

Under Power off status, press M^{*} V^{*} simultaneously for 5 seconds for coming into the advance setting mode, the screen will display all the related No. & value, then press V^{*} or V^{*} to adjust, press M^{*} to enter next setting, All parameters will be kept in record after press U^{*} when all settings completed.

Code	Option	Default parameters	Details
1Adj	Room Temperature Calibration	-2	-9℃~+9℃
			In: internal sensor (to control and protect the temperature)
2Sen	Sensor type	In	OU: external sensor (to control and protect the temperature)
2061	Sensor type		AL: internal/external sensor (internal sensor is for room temperature
			controlling, external sensor is for temperature protection)
3Lit	High Temperature Protection	50.0	5~60 °C
4dif	Switching Deviation	1	1~5℃
El to	Low Tomporature Distoction	0#	On: Function turned on
ə∟ıp	Low temperature Protection	Oli	Off: Function turned off
6Hit	Max. Set Temp.	45	35~95 <i>°</i> C
	Open window detect function	OFF	On: Function turned on
70EN	(OWD)	OFF	Off: Function turned off
8Otl	OWD Detect Time	15	Range: 2~30min
0.Otn	OWD Drop temp. select	2	Banga 2.4%
90tp	(Within detect time)	2	
0.Ddt	OWD Delay time select (Recover	20	Parga 10-60min
UFUL	to previous working status)	50	
	Factory Posot		when show"-"and keep press "M" for 5 seconds until show"", it means
AFAU	I ACIOLY NESEL	-	return to the restore factory reset

6. Installation:

1. Release the front cover by inserting a screwdriver into bottom crack.

2. Connect wires as the diagram, then tighten the screw.

3. Mounted the backing plate in the wall socket by screwdriver.

4. Connect the back power & front plate with insert the Conductive pin into the socket, then match the slot and press slightly to make them matched well.

7. Connecting Diagram





Gas Boiler Thermostat

8. WIFI connection & operation



» الد ^{ير} الدريم مقلم	8	ଷ୍ଡ । ୭୭୮ 11:02
~		0 🕀
යා ර	loudy	
30°C Outdoor Tem	Excellent Outdoor PM2.5	Excellent Outdoor Air Q
All Devices	Living room	Bedroon ···
	-	
	No devices	
(Add Device	\mathbf{b}
	~	
•	.Ö.	Q
No. 100		0

 Scan above QR Code or sourcing the Apps "Smart Life" Or "TuyaSmart" at App Store.

» الب ^{ير} الب ^{ير} و	図 第 1995月 11:04
Cancel	
Select 2.4 Wi-Fi Netwo enter pass	l GHz ork and sword.
If your Wi-Fi is 5GHz, be 2,4GHz. Common method	please set it to router setting
2.4oHz	
ବ୍ଟି Q-LINK	
A Password	¥.
4 0	

 Long press thermostat button "M" & "A" key, until "ℕ"icon shown on LCD and flashing, then click "Confirm indicator rapidly blink"

2. Account registration first, click "+" in the upper right corner of the main interface to add device.



5. Enter Wi-Fi password and click "Confirm", then click "Continue" to pair the devices

<	Add Manually	Auto S	can 🗄
Electricia	n 👘	1100	đ.
Lighting	Wash Aid	Cloud Frame	TRV
		Surroundings	
Large Home Ap	· 🔮		i Ite
Small Home Ap	Fan	Window Cleaner	Vacuum Cleaner (Bluetooth
Kitchen Applianc			0
Security	Robot Vacuum	Fan (Bluetooth)	Robot Vacur (Bluetooth
Sensors			_
Exercise Health	& Diffuser	Humidifier	Air Purifie
Video Su veillance	r-	and the second s	-
remance	Mosquito	Air Box	HVAC
Gateway Control			
Others	Dehumidifier	20.30 Weather clock	Thermosta
	6	6	6

3. Please select "Thermostat" in "Small Home Application"



 6. Waiting a few seconds till the device added successfully, click "Completed" to device main interface



3. Click "Program" for more weekly program setting

- 8 h." h." 3 < Week Program < Weekly program (5+1+1) > 242 1 Saturday -*
 - 8. "...." (A) (S) 0 97 10:51 Weekly program (5+1+1) Monday To Friday Period 1 06:30 | Temperature: 21.0°C Period 2 08:00 | Temperature: 18.0°C Period 3 11:30 | Temperature: 21.0°C Period 4 12:30 | Temperature: 18.0°C Period 5 3 18:00 | Ten rature: 21.0°C Period 6 22:30 | Temi erature: 16.0°C Period 1 06:30 | Temperature: 21.0°C Period 2 08:00 | Temperature: 18.0°C

5. Set time and temperature

- < 2 AC8500 0
 ON/OFF Keeping Warm Y
- 6. Click "Setting icon" for more settings

620 n	107	0 1971/10	51
(Setting		
Child lock		0	
Femperature	correction	-1	>
Set temperati	ure ceiling	45.0°C	>
Sensor select	lion	IN	>
Frost protecti	on	0	
Window chec	k	0	
State of the v	vindow	Close	d
Factory data	reset		
dp_switch_di	ſ	1.0	>
dp_limition_fl	oortemp	50.0	>



4. Click "Week Program" to

enter program settings





11. Users could change any one 12. Click on the top right corner of them as they want

to get device information.

13. Device name can be changed here





IMPORT, DISTRIBUTION & MANUFACTURE DATA & MEDIA E.E. www.data-media.gr, info@data-media.gr 1st Km Lagadas to Iraklio road , Lagadas, Thessaloniki, 57200 Models: AC8500H-B-WIFI [GCBL], AC8500H-B-WIFI [GBBL]